


Mounting Instructions

of the axial ventilator with luster terminal und diode 850 301
for ventilated weather and thermal radiation shield 1.1025.55.100

1. Loosen 3 x screw M4x6, and remove cap
2. Loosen 4 x screw M3x8, and remove axial ventilator.
REMARK :
In case of older versions separate the flexible wire, and strip the supply cable.
3. Simple wiring mounting:

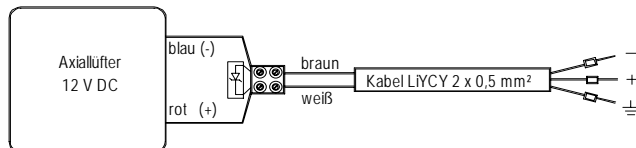


ventilator wire blue (-) to brown cable
ventilator wire red (+) to white cable

4. Screw the ventilator together by means of 4 x screw M3x8 by clockwise rotation.
5. Put on cap, and fasten it by means of 3 x screw M4x6 by clockwise rotation.

Recommended Tools:

Cross slot screw driver
Slot screw driver
Edge cutter
(with older instrument version)

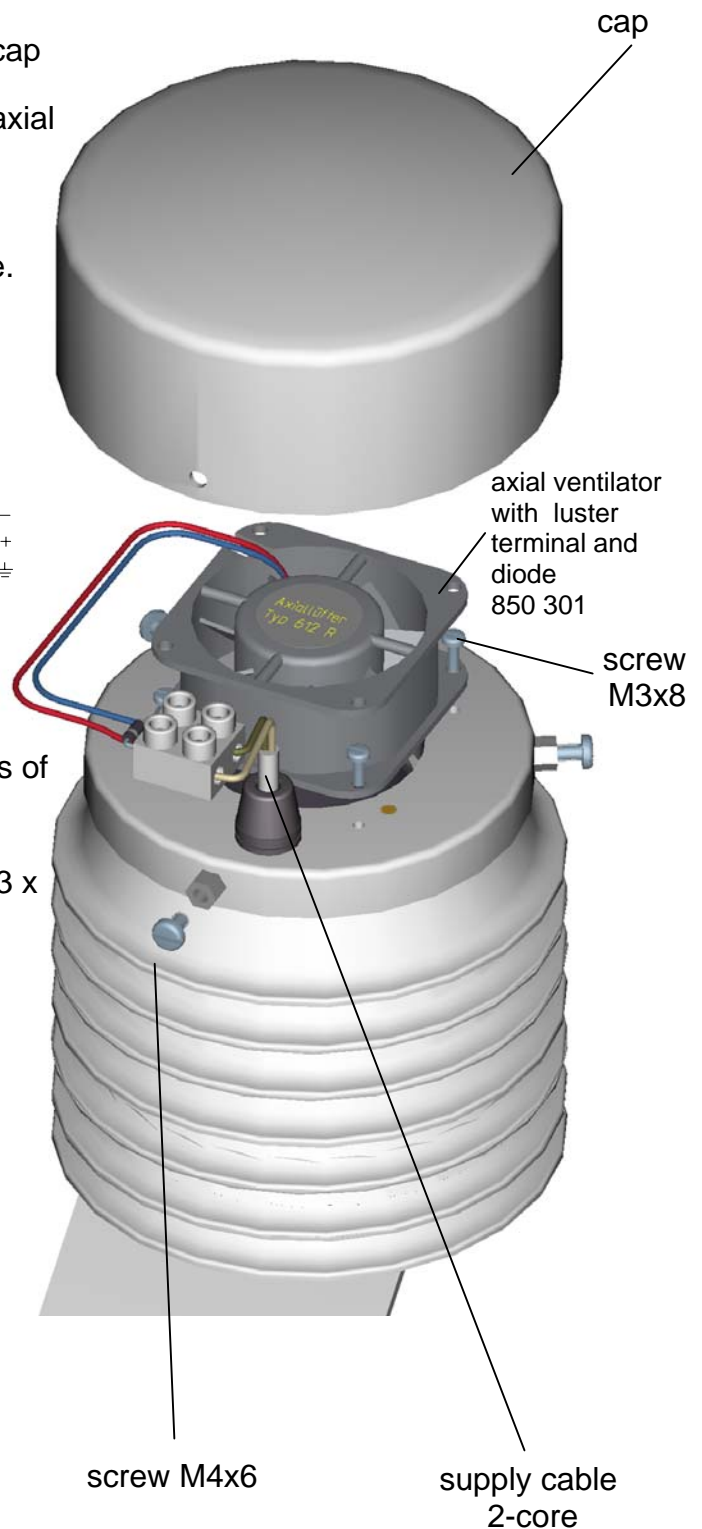



ADOLF THIES GmbH & Co. KG

Hauptstraße 76 37083 Göttingen Germany
P.O. Box 3536 + 3541 37025 Göttingen
Phone ++551 79001-0 Fax ++551 79001-65
www.thiesclima.com info@thiesclima.com



- Alterations reserved -