
Wind Direction Transmitter - compact

- with analogue output -

4.3129.0x.xxx



ADOLF THIES GmbH & Co. KG

Hauptstraße 76

Box 3536 + 3541

Phone ++551 79001-0

www.thiesclima.com

37083 Göttingen Germany

37025 Göttingen

Fax ++551 79001-65

info@thiesclima.com

Contents

1	Models available	2
2	Application	3
3	Construction and Mode of Operation	3
4	Recommendation Side Selection / Standard Installation	4
5	Installation.....	4
5.1	Mechanical Mounting	5
5.2	Electrical Mounting	5
6	Plug Mounting	5
7	Maintenance	6
8	Connecting Diagrams	6
9	Technical Data.....	7
10	Dimensional Drawing.....	9
11	Accessories	10

Figures

Figure 1: Connecting diagram for models with cable	6
Figure 2: Dimensional drawing with cable.....	9
Figure 3: Dimensional drawing with plug.....	9

Tables

Table 1: Electrical Output	8
----------------------------------	---

1 Models available

Order-No.	Meas. range	Electr. Output	Heating	Operating Voltage	Connection
4.3129.00.140	0 ... 360°	0 ... 20 mA	20 W	15...30 V DC or 24 V AC	12 m cable LiYCY 6 x 0,25 mm ²
4.3129.00.141	0 ... 360°	4 ... 20 mA	20 W	15...30 V DC or 24 V AC	12 m cable LiYCY 6 x 0,25 mm ²
4.3129.00.161	0 ... 360°	0 ... 10 V	20 W	15...30 V DC or 24 V AC	12 m cable LiYCY 6 x 0,25 mm ²
4.3129.00.167	0 ... 360°	0 2 V	20 W	8...30 V DC or 24 V AC	12 m cable LiYCY 6 x 0,25 mm ²
4.3129.00.173	0 ... 360°	0 5 V	20 W	8...30 V DC or 24 V AC	12 m cable LiYCY 6 x 0,25 mm

4.3129.00.740	0 ... 360°	0 ... 20 mA	20 W	15...30 V DC or 24 V AC	7 pole plug
4.3129.00.741	0 ... 360°	4 ... 20 mA	20 W	15...30 V DC or 24 V AC	7 pole plug
4.3129.00.761	0 ... 360°	0 ... 10 V	20 W	15...30 V DC or 24 V AC	7 pole plug
4.3129.00.767	0 ... 360°	0 ... 2 V	20 W	8...30 V DC or 24 V AC	7 pole plug
4.3129.00.773	0 ... 360°	0 ... 5 V	20 W	8...30 V DC or 24 V AC	7 pole plug
4.3129.00.940	0 ... 360°	0 ... 20 mA	20 W	15...30 V DC or 24 V AC	12 m cable LiYCY 6 x 0,25 mm ²
4.3129.00.941	0 ... 360°	4 ... 20 mA	20 W	15...30 V DC or 24 V AC	12 m cable LiYCY 6 x 0,25 mm ²
4.3129.02.141	0 ... 360°	4 ... 20 mA	10 W	15...30 V DC or 24 V AC	2 m cable 6 x 0,56 mm ²
4.3129.04.767	0 ... 360°	0 ... 2 V	20 W	8...30 V DC or 24 V AC	7 pole plug
4.3129.05.140	0 ... 360°	0 ... 20 mA	20 W	15...30 V DC or 24 V AC	15 m cable LiYCY 6 x 0,25 mm
4.3129.05.141	0 ... 360°	4 ... 20 mA	20 W	15...30 V DC or 24 V AC	15 m cable LiYCY 6 x 0,25 mm ²

2 Application

The wind direction transmitter is designed for the acquisition of the horizontal wind direction. The measuring values are output as electrical analogue signals. The measuring data available are ideally adapted to the supply in display instruments, recording instruments, datalogger, as well as process control systems.

An electronically-regulated heating system has been installed for wintertime use, in order to prevent a blocking of the gap between the external rotation parts by ice aggregation.

Power for the heating system could be provided for instance by our Power Supply Unit, Order No. 9.3388.00.000.


3 Construction and Mode of Operation

The outer parts of the instrument are made of corrosion-resistant material (aluminum, stainless steel, plastic). The aluminum parts are additionally protected by means of an anodic coat. Labyrinth sealing protects sensitive parts inside the instrument against humidity.

The wind direction is detected by means of a low-inertia wind vane, the ball bearing axis of which is connected to a code disc. This code disc is coded with a 5-Bit Gray-code which is scanned opto-electronically. The 5-Bit Code is converted to an analog signal via an integrated D/A-converter.

The code disc resolves the wind direction into 32 sectors (11,25°/ sector). The analogue output signal is proportional to the 32 sectors (see chapter 9, table 1).

The sectors start at wind direction N (North) with sector 0, and end with sector n (see drawing).

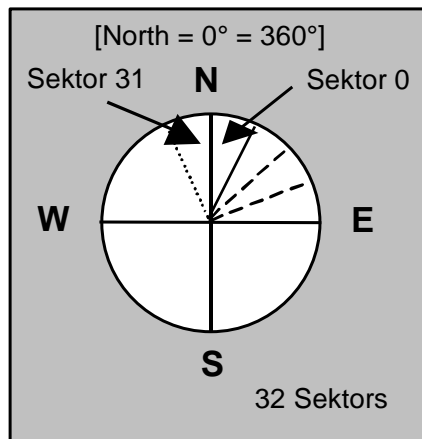

4 Recommendation Side Selection / Standard Installation

In general wind measurement instruments should be able to detect the wind conditions of a large area. In order to obtain comparable values when determining the surface wind, measurements should be taken at a height of 10 meters over an even unobstructed area. An unobstructed area means that the distance between the wind transmitter and an obstacle should be at least 10 times the height of the obstacle (s. VDI 3786). If it is not possible to fulfil this condition, then the wind transmitter should be set up a height where local obstacles do not influence the measured values to any significant extent (approx. 6-10 m above the obstacle).

The wind transmitter should be set up in the centre of flat roofs and not on the roof side in order to avoid bias in the direction (privileged directions).

5 Installation

Attention:

Storing, mounting and operation under weather conditions is permissible only in vertical position, as otherwise water can get into the instrument.

Remark:

When using fastening adapters (angle, traverses, hangers etc.) please take a possible effect by turbulences into consideration.

5.1 Mechanical Mounting

The mounting of the transmitter could be done for example at a traverse with a boring of PG 21 or on hangers with a boring of 29 mm Ø. (for ex. traverse *compact*, order-no. 4.3171.30.000). The connection cable or connecting plug is passed through the boring, and the wind direction transmitter is fixed with hexagonal nut (SW36) after the north alignment.


North Alignment

Rotate the case markings (north marking) on the shaft and on the protective cap until they are aligned. Then select an obvious point in a northerly direction in the surroundings (a tree, a building etc.) with the aid of a compass. Take a bearing on this point over the wind vane and the counter weight of the wind direction transmitter, and when these coincide screw the wind transmitter into place. (the north marking must indicate to the geographic north).

5.2 Electrical Mounting

For electrical connection please refer to the connecting diagram.

6 Plug Mounting

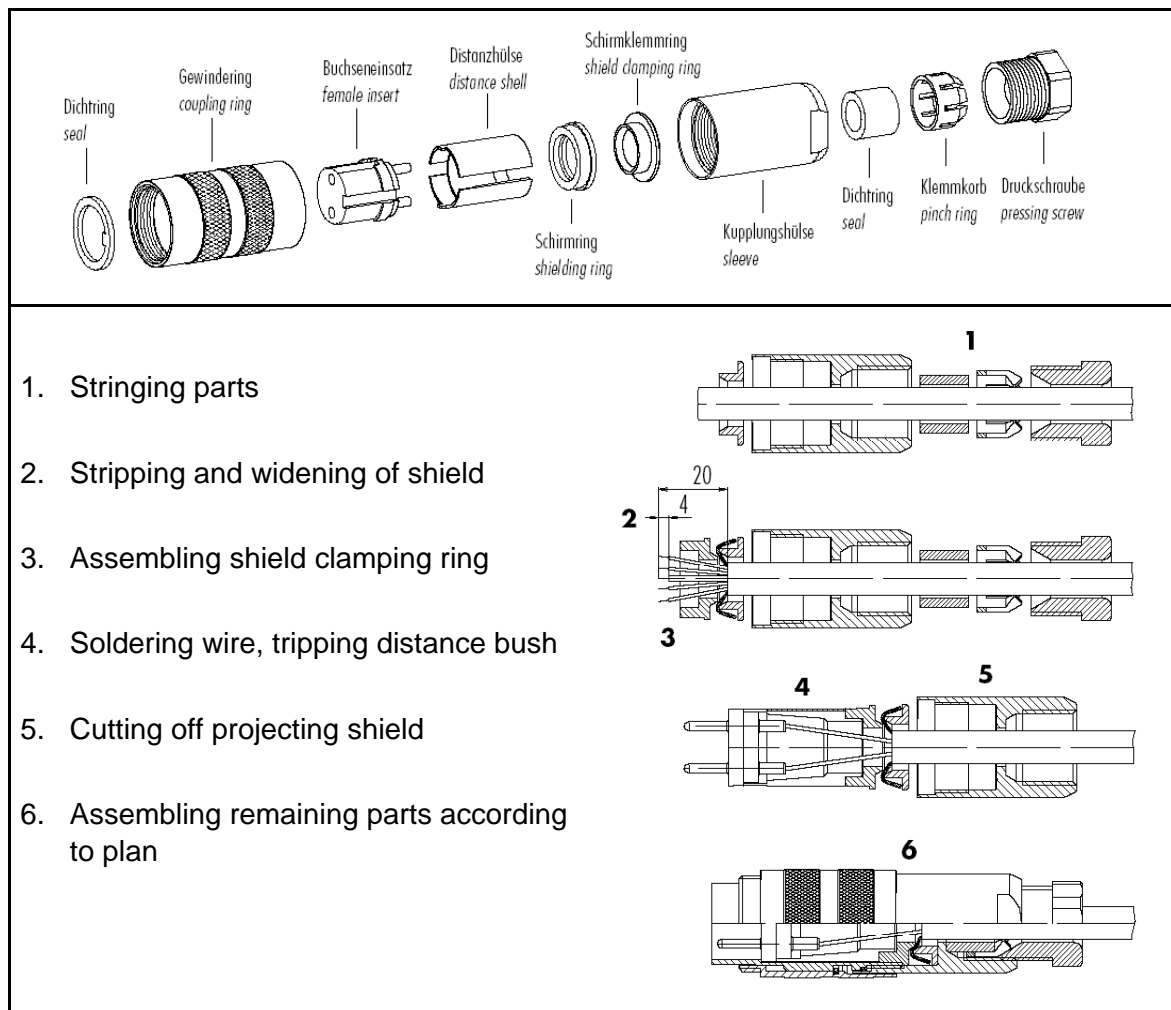

7 Maintenance

After proper mounting the instrument works maintenance free.

Heavy pollution can clog up the slit between the rotating and the stationary parts of the wind transmitter. This slit must be kept clean.

8 Connecting Diagrams

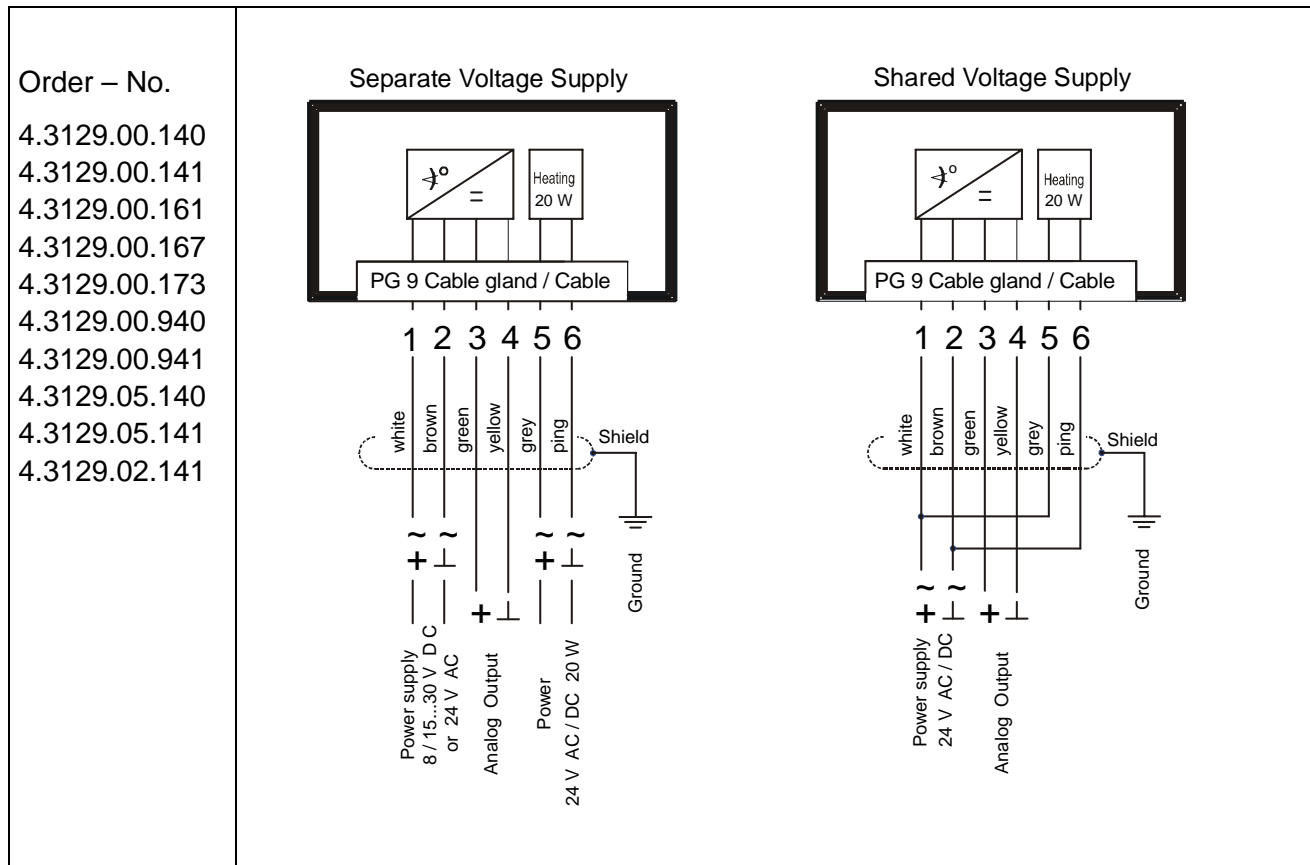


Figure 1: Connecting diagram for models with cable

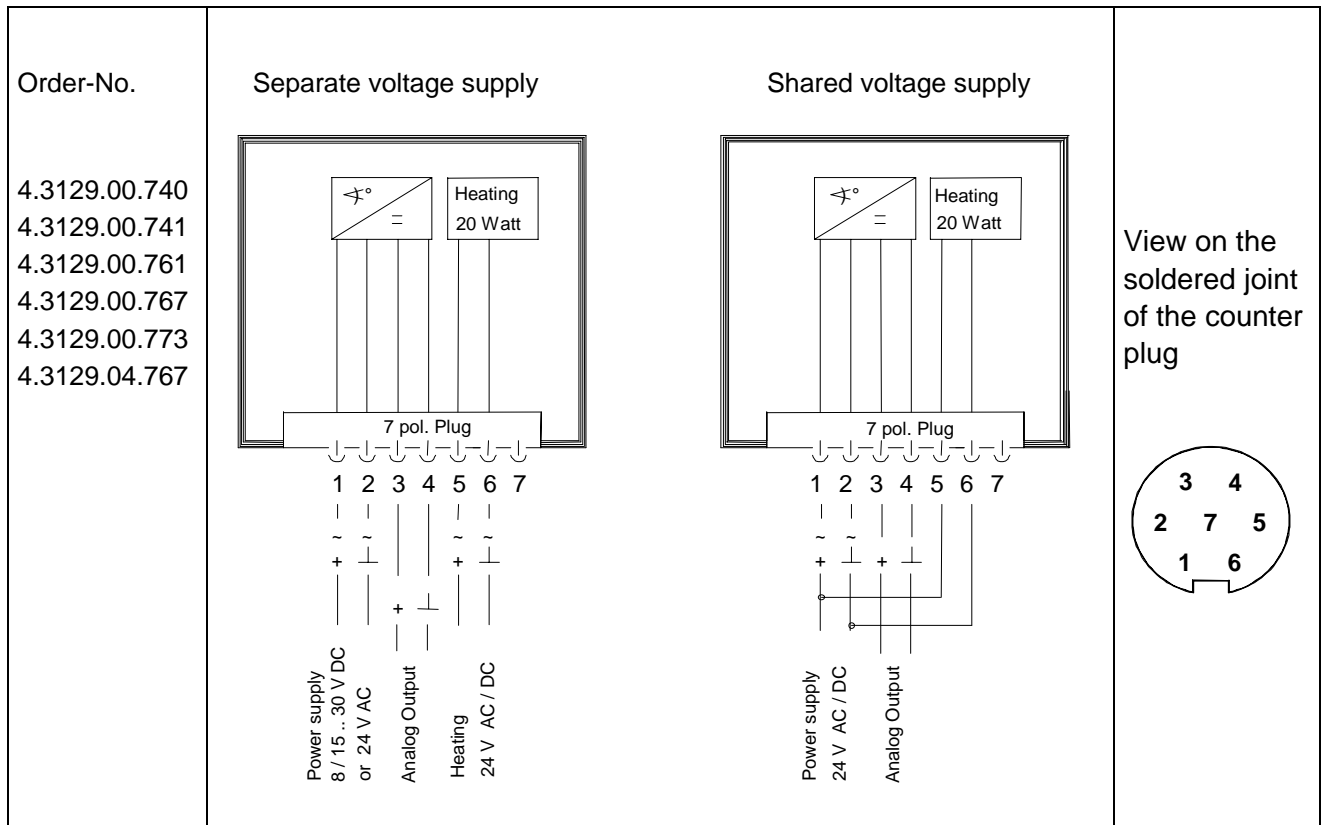


Figure 2: Connecting diagram for models with plug

9 Technical Data

Meas. range	0 ... 360°
Resolution	11,25° ; 5 Bit Gray-code (32 sectors)
Accuracy	± 5°
Measuring principle	opto-electronic
Electrical output	mA ; V (see table 1)
Load	
Current output (mA)	max. 500 Ohm (for > 15 V DC operating voltage)
Voltage output (V)	min. 1 K Ohm
Operating voltage	see models available, chapter 1
Operating voltage heating	24 V DC/AC, max. 20 W (10 W*)
Ambient temperature	-40°C ... 70°C
Survival speed	maximally 80 m/s, 30 minutes
Connection	See models available
Dimensions	see dimensional diagram
Montage	For ex. onto a mast tube with receptacle thread PG 21 or boring Ø 29 mm
Protection	IP 55
Weight	ca. 0,60 – 1,20 kg depending on model

* The ambient temperature, stated with wind direction transmitters with 10 W heating, is possible only in ice-free condition.

The electrical output is carried out on the basis of the code-disc resolution (5 bit) in 32 increments.

		4.3129.0x.140 940	4.3129.0x.141 741 941	4.3129.0x.167 767	4.3129.0x.173 773	4.3129.0x.161 761
Incr.	[Angle degr.]	0 .. 20 [mA]	4 20 [mA]	0 ..2 [V]	0 .. 5 [V]	0 ..10 [V]
0	00,00 – 11,25	0,000	4,0	0,000	0,00	0,00
1	11,25 – 22,50	0,625	4,5	0,0625	0,156	0,313
2	22,50 – 33,75	1,250	5,0	0,1250	0,312	0,626
3	33,70 – 45,00	1,880	5,5	0,1880	0,468	0,939
4	45,00 - 56,25	2,500	6,0	0,2500	0,624	1,252
5	56,25 - 67,50	3,125	6,5	0,3125	0,780	1,565
6	67,50 - 78,75	3,750	7,0	0,3750	0,936	1,878
7	78,75 – 90,00	4,375	7,5	0,4375	1,092	2,191
8	90,00 - 101,25	5,000	8,0	0,5000	1,248	2,504
9	101,25 - 112,50	5,625	8,5	0,5625	1,404	2,817
10	112,50 - 123,75	6,250	9,0	0,6250	1,560	3,130
11	123,75 – 135,00	6,875	9,5	0,6875	1,716	3,443
12	135,00 - 146,25	7,500	10,0	0,7500	1,872	3,756
13	146,25 - 157,50	8,125	10,5	0,8125	2,028	4,069
14	157,50 - 168,75	8,750	11,0	0,8750	2,184	4,382
15	168,75 – 180,00	9,375	11,5	0,9375	2,340	4,695
16	180,00 - 191,25	10,000	12,0	1,0000	2,496	5,008
17	191,25 - 202,50	10,625	12,5	1,0625	2,652	5,321
18	202,50 - 213,75	11,250	13,0	1,1250	2,808	5,634
19	213,75 - 225,00	11,875	13,5	1,1875	2,964	5,947
20	225,00 - 236,25	12,500	14,0	1,2500	3,120	6,260
21	236,25 - 247,50	13,125	14,5	1,3125	3,276	6,573
22	247,50 - 258,75	13,750	15,0	1,3750	3,432	6,886
23	258,75 – 270,00	14,375	15,5	1,4375	3,588	7,199
24	270,00 - 281,25	15,000	16,0	1,5000	3,744	7,512
25	281,25 - 292,50	15,625	16,5	1,5625	3,900	7,825
26	292,50 - 303,75	16,250	17,0	1,6250	4,056	8,138
27	303,75 – 315,00	16,875	17,5	1,6875	4,212	8,451
28	315,00 - 326,25	17,500	18,0	1,7500	4,368	8,764
29	326,25 - 337,50	18,125	18,5	1,8125	4,524	9,077
30	337,50 - 348,75	18,750	19,0	1,8750	4,680	9,390
31	348,75 – 00,00	19,375	19,5	1,9375	4,836	9,703

Table 1: Electrical Output

10 Dimensional Drawing

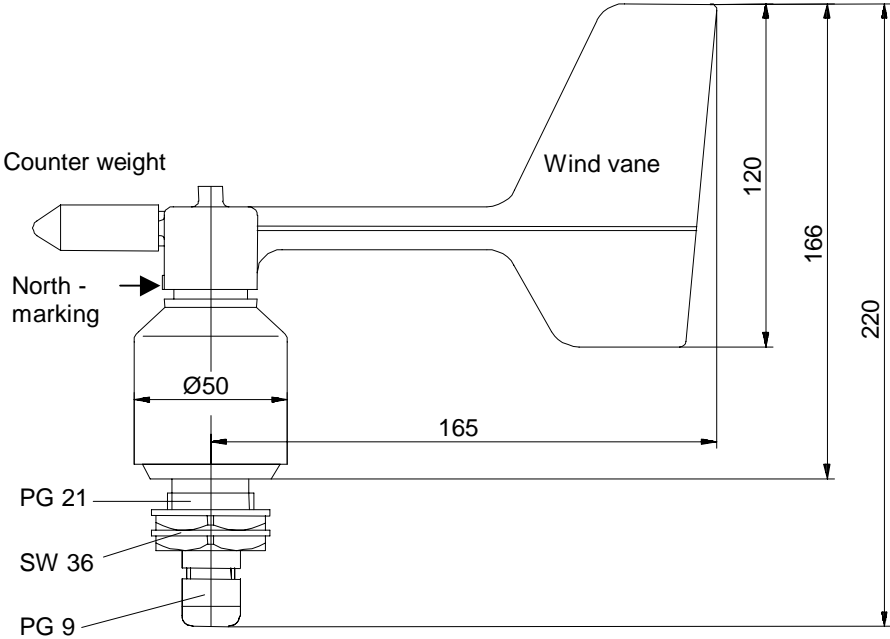


Figure 2: Dimensional drawing with cable

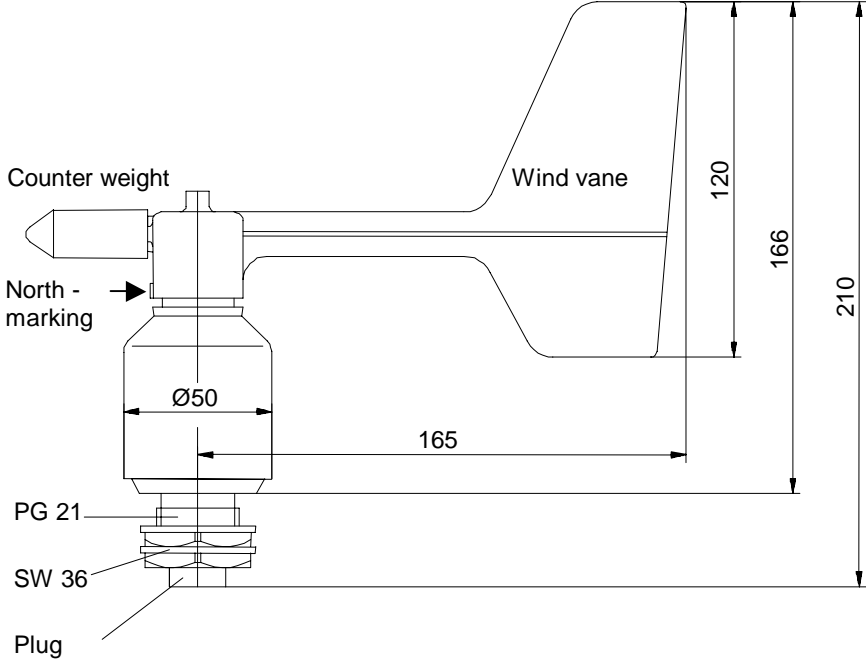


Figure 3: Dimensional drawing with plug

11 Accessories

The following accessories are available for the wind direction transmitter:

Traverse For mounting the wind speed transmitter and wind direction transmitter <i>compact</i> jointly onto a mast.	4.3171.30.000 4.3171.31.000	Clamping range: Ø 48 ... 102 mm Clamping range: Ø 116 ... 200 mm Sensor distance: 0,8 m Material: Aluminum
--	--------------------------------	---

Traverse, short For mounting the wind direction transmitter <i>compact</i> onto a mast.	4.3171.40.000 4.3171.41.000	Clamping range: Ø 48 ... 102 mm Clamping range: Ø 116 ... 200 mm Length: 0,4 m Material: Aluminum
--	--------------------------------	--

Lightning rod For mounting the a.m. traverses	506351	Length: 0,56 m Material: stainless steel
--	--------	---

Please contact us for other accessories such as cables, power supply units, masts, as well as for additional mast- or system-constructions.

	ADOLF THIES GmbH & Co. KG		
	Hauptstraße 76 37083 Göttingen Germany P.O. Box 3536 + 3541 37025 Göttingen Phone ++551 79001-0 Fax ++551 79001-65 www.thiesclima.com info@thiesclima.com		

- Alterations reserved -